



SPECIFICATIONS:

- ◆ Model: WG66 Goodman Handle Diving Light
- ◆ Bulb: White CREE XM-L2 U2 LED *6 (max 5000 lumens)
- ◆ Modes: high > low > strobe > off
- ◆ Runtime: high 120 min, low 240 min, strobe 180 min
- ◆ Color temperature: 6500 K
- ◆ Reflector: glossy aluminum reflector
- ◆ 8 mm polycarbonate lens
- ◆ Body material: durable aircraft-grade aluminum
- ◆ Angle of light beam: 8° hot spot, 110° periphery
- ◆ Surface treatment: premium type III hard-anodizing
- ◆ Color: Black
- ◆ Battery: 18650 Li-on Battery*6 (built-in)
- ◆ With battery over-discharging protection, and polarity reversing protection
- ◆ Fully charging time: 8 – 10 hours
- ◆ With gas release valve
- ◆ Operation voltage: 13.0 V to 9.0 V
- ◆ Waterproof: 200 Meters underwater
- ◆ Dimensions: 213 mm (length) * 78 mm (dia. of lamp head) * 63 mm (dia. of lamp body)
- ◆ Weight: ca. 1220 g. (with built-in battery)
- ◆ Underwater Weight: ca. 460 g. (with built-in battery)
- ◆ Free fall drop test height: 1.5 Meters

POWER INDICATOR:

Power indicator is at the end of the light. It lights up in green, or yellow, or red, when voltage is above 50%, or between 50-30%, or between 30-10%. It flashes in red for voltage between 10-5%, and turns off when voltage is below 5%.

LOW BATTERY WARNING:

The light flashes 3 times if the battery voltage is less than 10%; it repeats after 5 seconds, and then switches to lower brightness. The light switches off when the voltage is less than 5%.

BATTERY CHARGING:

1. Plug one side of charger in the wall power socket.
2. Plug the other side of charger in the two ports at the end of the light, disregarding the positive or negative electrode of the ports.
3. The indicator light on charger lights in red if the battery is not fully charged; it turns green after the battery is fully charged.
4. Unplug the charger and use the light.

MODES CHANGING:

Successively push the switch ON-OFF to cycle through White high, White medium, White low, Red, and off. After each push, the switch will slide back to original position automatically.

(If the switch gets stuck, please add the washing liquid in the switch slot, push switch back and forth till it moves smoothly. Please rinse it with the clean water afterwards.)

⚠ CAUTION:

1. Never attempt to repair or modify the light yourself.
2. Tighten the loosened sealing part of the light before diving. Check regularly for sharp edges, scratches or damages to the lens surface or O-ring, as this can cause the light to flood under pressure.
3. Rinse the product surface thoroughly. Allow sufficient time to dry both inside and outside before storage. PLEASE LUBRICATE THE THREADS, O-RING GROOVE WITH SILICONE GREASE TIMELY.
4. Turn off the light, and put the switch sleeve on the lamp head for transport or storage. Do not lay the light in a fire or expose it to direct heat.
5. Charge the battery after each use, or once every three months, for preparing the next dive.
6. Never leave the light unattended when it is on.
7. Keep the device out of the reach of children or pets.
8. Never shoot the light direct to human or pet's eye.

WARRANTY RETURN POLICY

Please contact your local distributor or retailer for information on how to handle your warranty items.

