

Digital Housing Guide for - Fuji

Camera Model	Digital Camera Housing Features	Housing Style & Housing Number	Use Camera's Built-in Flash	Recommended DS51 / DS125 Substrobe Packages (see page 3) * Denotes recommended use with optional sync cord #4103.51.	Housing Back O'ring	Optional (S)ingle or (D)ual Handle	Optional Filters	Use External Wide-Angle Lenses
Fuji								
E900	Controls for all camera functions	DC-200 #6154.90	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
F20	Controls for all camera functions	DC-200 #6154.20	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
F30 F31fd	Controls for all camera functions	DC-200 #6154.30	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
F50	Controls for all camera functions	DC-200 #6154.50	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
F480	Controls for all camera functions	DC-200 #6154.48	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4

Digital Housing Guide for - Nikon

Camera Model	Digital Camera Housing Features	Housing Style & Housing Number	Use Camera's Built-in Flash	Recommended DS51 / DS125 Substrobe Packages * Denotes recommended use with optional sync cord #4103.51.	Housing Back O'ring	Optional (S)ingle or (D)ual Handle	Optional Filters	Use External Wide-Angle Lenses
Nikon								
Coolpix 5900 Coolpix 7900	Controls for all camera functions	DC-200 #6181.79	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
Coolpix 7600	Controls for all camera functions	DC-200 #6181.76	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
Coolpix L1	Controls for all camera functions	DC-200 #6182.21	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.41 #6441.81	Yes see page 4
Coolpix L5	Controls for all camera functions	DC-200 #6182.25	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.41 #6441.81	Yes see page 4
Coolpix L6	Controls for all camera functions	DC-200 #6182.26	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.41 #6441.81	Yes see page 4
Coolpix L11	Controls for all camera functions	DC-200 #6182.30	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
Coolpix L12	Controls for all camera functions	DC-200 #6182.32	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
Coolpix L15	Controls for all camera functions	DC-200 #6182.35	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
Coolpix P1 Coolpix P2	Controls for all camera functions	DC-200 #6182.11	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
Coolpix P3 Coolpix P4	Controls for all camera functions	DC-200 #6182.14	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
Coolpix P5000 Coolpix P5100	Controls for all camera functions	DC-200 #6182.50	Yes	TTL #3944.45, #3944.51, #3944.75	#0109	#9523.31(S) #9523.32(D)	#6441.41 #6441.81	Yes see page 4
Coolpix S200	Controls for all camera functions	DC-200 #6184.20	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
Coolpix S500	Controls for all camera functions	DS-200 #6184.50	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4

Digital Housing Guide for Olympus

Camera Model	Digital Camera Housing Features	Housing Style & Housing Number	Use Camera's Built-in Flash	Recommended DS51 / DS125 Substrobe Packages * Denotes recommended use with optional sync cord #4103.51.	Housing Back O'ring	Optional (S)ingle or (D)ual Handle	Optional Filters	Use External Wide-Angle Lenses
Olympus								
SP-350	Controls for all camera functions	DC-501 #6132.35	Yes	TTL #3944.45, #3944.51, #3944.75	#0110	#9523.32(D)	#6441.32 #6441.72	Yes see page 4
SP-500 UZ	Controls for all camera functions	DC-501 #6132.50	Yes	Manual #3944.47, #3944.54, #3944.77	#0110	#9523.32(D)	#6441.41 #6441.81	Yes see page 4
SP-510 UZ	Controls for all camera functions	DC-501 #6132.51	Yes	Manual #3944.47, #3944.54, #3944.77	#0110	#9523.32(D)	#6441.41 #6441.81	Yes see page 4
Stylus 760 - mju 760	Controls for all camera functions except print button	DC-200 #6138.76	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
Stylus 780 - mju 780	Controls for all camera functions	DC-200 #6138.78	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
Stylus 810 - mju 810 Stylus 1000 - mju 1000	Controls for all camera functions except print button	DC-200 #6138.81	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4

Digital Housing Guide for Sony

Camera Model	Digital Camera Housing Features	Housing Style & Housing Number	Use Camera's Built-in Flash	Recommended DS51 / DS125 Substrobe Packages * Denotes recommended use with optional sync cord #4103.51.	Housing Back O'ring	Optional (S)ingle or (D)ual Handle	Optional Filters	Use External Wide-Angle Lenses
Sony								
DSC-H3	Controls for all camera functions	DC-501 #6111.3	Yes	Manual #3944.47, #3944.54, #3944.77	#0110	— #9523.32	#6441.41 #6441.81	Yes see page 4
DSC-H5	Controls for all camera functions	DC-582 #6111.5	Yes	Manual #3944.47, #3944.54, #3944.77	#0132.59	—	#6441.41 #6441.81	Yes see page 4
DSC-H7	Controls for all camera functions	DC-582 #6111.7	Yes	Manual #3944.47, #3944.54, #3944.77	#0132.59	—	—	No
DSC-H9	Controls for all camera functions	DC-582 #6111.9	Yes	Manual #3944.47, #3944.54, #3944.77	#0132.59	—	—	No
DSC-P100, P120, P150	Controls for all camera functions	DC-200 #6112.15	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
DSC-P200	Controls for all camera functions	DC-200 #6112.20	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
DSC-S650	Controls for all camera functions	DC-200 #6112.65	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
DSC-W5 DSC-W7	Controls for all camera functions	DC-200 #6114.05	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
DSC-W50, W55 DSC-W70	Controls for all camera functions	DC-200 #6114.50	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
DSC-W80 DSC-W90	Controls for all camera functions except home button	DC-200 #6114.90	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
DSC-W100	Controls for all camera functions	DC-200 #6114.10	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4
DSC-W200	Controls for all camera functions	DC-200 #6114.20	Yes	Manual #3944.47, #3944.54, #3944.77	#0109	#9523.31(S) #9523.32(D)	#6441.32 #6441.72	Yes see page 4

DS51 & DS125 Substrobe Packages

Manual Exposure EV-Controller Packages	TTL Exposure Sync Cord Packages
#3944.47 DS51, EV-Controller, Strobe Arm Is #3944.54 DS51, EV-Controller, Strobe Arm SA-100R #3944.77 DS125, EV-Controller, Strobe Arm SA-100R, Smart Charger	#3944.45 DS51, Sync Cord, Strobe Arm Is #3944.51 DS51, Sync Cord, Strobe Arm SA-100R #3944.75 DS125, Sync Cord, Strobe Arm SA-100R, Smart Charger

Optional Wide - Angle Lenses and Adapters

Note: Inon, Sea&Sea, Epoque, lenses not sold by Ikelite.

Camera Model

Camera Model	Accessory Lenses & Adapters
Canon	
A550, A570IS, A630, A640, A710IS, 720IS	1
G7, G9	4
S2IS, S3IS, S5IS	1
S80, SD630, SD900, SD1000,	2 • 3
SD700IS, SD750IS, SD800IS, SD850IS, SD950IS	2 • 3
SX100IS	2 • 3
Fuji	
E900, F20, F30, F31fd, F50, F480	2 • 3
Nikon	
Coolpix 5900, 7600, 7900	2 • 3
Coolpix L1, L5	1
Coolpix L6	2 • 3
Coolpix L11	2 • 3
Coolpix L12, L15	2 • 3
Coolpix P1, P2, P3, P4	2 • 3
Coolpix P5000, P5100	1
Coolpix S200, S500	2 • 3
Olympus	
SP-350	3
SP-500 UZ, SP-510 UZ	1
Stylus 760, 780	3
Stylus 810, 1000	3
Sony	
DSC-H3, H5, H7, H9	1
DSC-P100, P120, P150, P200	2 • 3
DSC-S650	2 • 3
DSC-W5, W7, W50, W55, W70, W80, W90, W100, W200	2 • 3

Lenses & Adapters

- (1) Ikelite W-20 Wide-Angle Lens
Also fits 67mm threaded lens by Inon, Sea&Sea and Epoque
- (2) #9306.80 Bayonet Mount Wide-Angle Adapter for *Inon UWL-105AD Bayonet Style Lens*
(Lens not included)
- (3) #9306.81 67mm Threaded Wide-Angle Adapter for Ikelite W-20, Inon UWL-100 & Epoque DCL-20 Threaded Lens
(Lens not included)
- (4) #9305.92 Optional Flat Port slightly limits camera's zoom range, but allows for effective use of 67mm threaded external wide-angle lenses. (Lens not included)



W-20 WIDE-ANGLE LENS

Capture more of the view by adding the Ikelite W-20 Wide-Angle Conversion lens to your digital still or video housing. Enjoy increased clarity and enhanced color that results from widening your camera lens' angle of coverage and getting closer to your subject.

The Ikelite W-20 can be removed and replaced while underwater for maximum versatility. Includes protective caps, soft pouch and silicone lubricant. Compatible with most Ikelite camera housings as well as any housing port that features a 67mm thread.

Maximum depth rating 60m (200')

W-20 Wide-Angle Lens

#6420 0.56x magnification



REMOVABLE EXTERNAL UR/Pro Color Filter

Enhances warm reds and oranges in tropical "blue" water with available sunlight up to 80' (24m). Secures to the outside of the Ikelite lens port offering easy installation and removal. For use without a flash.

Filter Size
 #6441.32.....2.2" (5.5cm)dia
 #6441.41.....3.0" (7.6cm)dia
 #6441.42.....3.6" (9.1cm)dia
 #6441.43.....4.2" (10.6cm)dia

REMOVABLE EXTERNAL Green Water Filter

Enhances contrast and alters the color of "green" water to give your subject a rich, natural tone. Effective with available sunlight up to 80' (24m). For use without a flash.

Filter Size
 #6441.72.....2.2" (5.5cm)dia
 #6441.81.....3.0" (7.6cm)dia
 #6441.82.....3.6" (9.1cm)dia
 #6441.83.....4.2" (10.6cm)dia