



Nikon LENS - PORT - CHART 2012/1

| NIKON Lens | SUBAL F5/N10/N80 SUBAL D10/FS2 SUBAL ND2/ND20 SUBAL ND3/ND30 SUBAL ND700/ND90 | D i o p t e r | Zoom Gear operated with manual Focus control in SUBAL F5/N10/N80 SUBAL D10/FS2 SUBAL ND2/ND20 | Zoom Gear operated with manual Focus control in SUBAL ND3/ND30 ND700/ND90 ND7000 | Focus Gear in SUBAL F5/N10/N80 SUBAL D10/FS2 SUBAL ND2/ND20 | Focus Gear in SUBAL ND3/ND30 ND700/ND90 ND7000 |
|-----------------------------------|---|---------------------------------|---|---|---|--|
| AF DX 10,5 / 2.8G ED | DP-FE DP-100 | n.a. | | | 4FN051 4FN751 | 4FN351 |
| MF 16 / 2.8 | DP-FE | n.a. | | | 4FN014 | |
| AF 16 / 2.8 D | DP-FE | n.a. | | | 4FN050 universal: 4FN350 | universal: 4FN350 4FN850 |
| AF 14 / 2.8 ED | DP-FE + EXR20 DP-230 + EXR20 | n.a. | | | AF only | AF only |
| AF 18 / 2.8 D | DP-SWB DP-FE + EXR15 DP-230 + EXR15 | +4/77 +2/77 +2/77 | | | 4FN016 | |
| AF 20 / 2.8 D | DP-SWB DP-FE | +4/62 +2/62 | | | 4FN001 4FN701 (in ND70) | 4FN301 |
| AF 24 / 2.8 D | DP-SWB DP-FE | +4/52 +2/52 | | | 4FN027 | |
| AF 24 / 1.4 G ED | DP-FE + EXR40 | +2/77 | | | 4FN835 | |
| AF 28 / 2.8 D | DP-SWB DP-FE | +4/52 +2/52 | | | 4FN027 | |
| AF 35 / 2 D | DP-SWB DP-FE | +4/52 +2/52 | | | 4FN034 4FN334 | |
| AF 60 / 2.8 D micro | FP-90 | | | | 4FN006 4FN706 (in ND70) | 4FN306 |
| | FP-FC60 | | | | gears included | gears included |
| AF-S 60 / 2.8 G ED micro | FP-75 | | | | 4FN362 (universal, also in ND20/ND70) | 4FN362 4FN862 |
| AF-S 85 / 3.5 G ED micro | FP-90 | | | | universal: 4FN365 | universal: 4FN365 4FN865 |
| AF 105 / 2.8 D | FP-120 | | | | AF only | AF only |
| | FP-FC60+EXR33 | | | | 4FN15F (focus g.) | 4FN15F (focus g.) |
| | FP-FC105 | | | | gears included | gears included |
| AF-S 105VR / 2.8 G ED | FP-FC105VR FP-120VR (wo. Focus) | | | | | |
| AF 200 / 2.8 D | FP-120 + EXR66 | | | | 4FN200 (with FP-FC105 only) | |
| | FP-FC105 + EXR66 | | | | | |
| AF-S DX 10-24 / 3.5-4.5G ED | DP-FE + EXR50 DP-230 + EXR50 | +2/77 +2/77 | 4ZN333 identical! | 4ZN333 identical! | 4ZN833 | |
| AF-S DX 12-24 / 4G IF-ED | DP-FE + EXR50 DP-230 + EXR50 | | 4ZN100 (in ND20) 4ZN700 (in ND70) | 4ZN300 4ZN800 | | |
| AF-S 14-24 / 2.8G ED | DP-FE4 + EXR65 DP-230/4 + EXR65 DP-SUP + EXR65 | n.a. | | 4ZN327 4ZN827 | | |
| AF-S 16-35 / 4.0G ED VR | DP-FE4 + EXR90 DP-230/4 + EXR90/4 | +2/77 +2/77 | | 4ZN034 4ZN834 | | |
| AF-S DX 16-85 / 3.5-5.6G ED VR | DP-FE + EXR40 DP-230+ EXR40 | | 4ZN032 identical! 4ZN732 (in ND70) | 4ZN032 identical! 4ZN832 | | |
| AF-S 17-35 / 2.8 D | DP-SWB + EXR40 DP-FE + EXR60 DP-230+ EXR60 DP-SUP + EXR75 | +4/77 +2/77 +2/77 | 4ZN023 identical! 4ZN723 (in ND70) | 4ZN023 identical! 4ZN823 | AF only | AF only |
| AF-S DX 17-55 / 2.8G IF-ED | DP-FE3 + EXR70N1 DP-FE4 + EXR70/4 DP-230/3 + EXR70N1 DP-230/4 + EXR70/4 | | 4ZN026 (also in ND70) | 4ZN326 4ZN826 | | |

| | | | | | | |
|---|---|----------------------------------|---|--|----------------|----------------|
| AF-S DX 18-70 / 3.5-4.5G IF-ED | DP-FE + EXR20 DP-230 + EXR20 | +2/67 +2/67 | 4ZN101 4ZN701 (in ND70) | 4ZN301 | | |
| AF 18-35 / 3.5-4.5 D | DP-SWB + EXR33 DP-FE + EXR40 DP-230 + EXR40 | +4/77 +2/77 +2/77 | 4ZN021 identical! 4ZN721 (in ND70) | 4ZN021 identical! | | |
| AF-S DX 18-55 / 3.5-5.6 G VR | DP-SWB + EXR33 FP-90 /4 | +4/52 | | 4ZN835 | | |
| AF 20-35 / 2.8 D | DP-SWB + EXR33 DP-FE + EXR40 DP-230 + EXR40 | +4/77 +2/77 +2/77 | 4ZN014 4ZN714 (in ND70) | 4ZN314 | AF only | AF only |
| AF 24-50 / 3.3-4.5 D | DP-SWB + EXR20 DP-FE + EXR33 DP-230 + EXR33 | +4/62 +2/62 +2/62 | 4ZN008 | 4ZN008 identical! | 4FN028 | |
| AF-S 24-70 / 2.8G ED | DP-FE + EXR100 DP-230 + EXR100 | +2/77 +2/77 | 4ZN328 universal | 4ZN328 universal 4ZN828 | | |
| AF 24-85 / 3.5-4.5 G | DP-SWB + EXR15 DP-FE + EXR20 DP-230 + EXR20 | +4/67 +2/67 +2/67 | 4ZN025 4ZN725 (in ND70) | 4ZN325 | AF only | AF only |
| AF 24-85 / 2.8-4 D | DP-FE + EXR33 DP-230 + EXR33 | +2/72 +2/72 | **) | 4ZN831 | AF only | AF only |
| AF-S VR 24-120 / 3.5-5.6G IF-ED | DP-FE + EXR50 DP-230 + EXR50 | +2/72 +2/72 | | 4ZN829 | | |
| AF-S 28-70 / 2.8 D | DP-FE3 + EXRS70 DP-FE4 + EXR70/4 DP-230/3 + EXRS70 DP-230/4+ EXR70/4 | +2/77 +2/77 +2/77 +2/77 | **) | 4ZN830 | AF only | AF only |
| AF 28-80 / 3.5-5.6 D 0,4m | DP-SWB + EXR15 DP-FE + EXR33 DP-230 + EXR33 | +4/58 +2/58 +2/58 | 4ZN019 | | AF only | AF only |
| AF 28-80 / 3.3-5.6 G 0,35m | FP-68B DP-SWB + EXR15 DP-FE + EXR33 DP-230 + EXR33 | +4/58 +2/58 +2/58 | 4ZN009 4ZN709 (in ND70) | | AF only | AF only |
| AF 28-85 / 3.5-4.5 | FP-102B DP-122 DP-FE + EXR60 DP-230 + EXR60 | +4/62 +2/62 +2/62 +2/62 | 4ZN007 4ZN707 (in ND70) | | 4FN110 | |
| AF 28-105 / 3.5- 4.5 D | DP-FE + EXR33 DP-230 + EXR33 | +2/62 +2/62 | 4ZN024 | 4ZN024 | | |
| AF Micro 70-180 / 4.5-5.6 D ED | FP-120 + EXR66 | | 4ZN022 4ZN722 (in ND70) | | | |
| | FP-FC105 +EXR66 | | 4ZN022 4ZN722 (in ND70) | 4ZN322 | 4FN718F | |

*) needed if a FOCUS lens gear is used too

**) operated with focus cogg gear directly on the lens rubber barrel

GEARS FOR OLDER LENSES ON REQUEST!

ERRORS EXCEPTED!