

Canon Lens	SUBAL D60 SUBAL C10/C20/C30 SUBAL CD1 SUBAL CD5	D i o p t e r	Zoom Gear operated with man. Focus control SUBAL D60/C10 SUBAL C20/C30 SUBAL CD1/CD5	Zoom Gear operated with man. Focus control SUBAL C40/C50 SUBAL CD3/CD5MII SUBAL CD500 /CD7/ CD5M3	Focus Gear SUBAL D60/C10 SUBAL C20/C30 SUBAL CD1/CD5	Focus Gear SUBAL C40/C50 SUBAL CD3 /CD5MII SUBAL/CD500/CD7/ CD5M3
EF15 / 2.8 FE	DP-FE DP-100					4FC820
EF15 / 2.8 FE + Kenko Teleconverter Pro 300 AF DG 1,4x	DP-100 + EXR20					
EF14 / 2.8L USM	DP-230 + EXR40	n.a.				
EF14 / 2.8L USM II	DP-230 + EXR40	n.a.				4FC863
EF20 / 2.8 USM	DP-FE + EXR33 DP-SWB + EXR15 DP-SWC	+2/72 +4/72 +4/72				
EF24 / 1.4L USM	DP-FE + EXR20	+2/77				
EF24 / 1.4L USM II	DP-FE4 + EXR40 DP-230 + EXR40 DP-SUP + EXR50/4	+2/77				4FC865
EF24 / 2.8	DP-FE DP-SWB	+2/58 +4/58				
EF28 / 1.8 USM	DP-FE + EXR15 DP-SWB	+2/58 +4/58				
EF28 / 2.8	DP-FE DP-SWB	+2/52 +4/52			4FC030	
EF35 / 1.4L USM		72				
EF35 / 1.4L USM II	DP-FE4 + EXR33					4FC866
EF35 / 2	DP-FE	+2/52				
EF50 / 1.2L USM	DP-FE				not available	not available
EF50 / 1.4 USM						
EF50 / 1.8 II	FP-68					
EF8-15 / 4L USM	DP-FE + EXR20 DP-230 + EXR20 DP100 + EXR	n.a.	4ZC050	4ZC050 (C40/C50) 4ZC850 (CD3/CD5MII CD500/CD7/ CD5M3)		
EF8-15 / 4L USM + Kenko Teleconverter Pro 300 AF DG 1,4x	DP-FE + EXR40 DP-230 + EXR40	n.a.	4ZC050	4ZC050 (C40/C50) 4ZC850 (CD3/CD5MII CD500/CD7/ CD5M3)		
EF-S10-22 / 3.5 - 4.5 USM	DP-FE + EXR50 DP-SWB + EXR33	+2/77 +4/77	4ZC065 4ZC365 (in C300)	4ZC465 (C40/C50) 4ZC865 (CD3/CD5MII CD500/CD7/ CD5M3)		
EF-S 15-85 / 3.5-5.6 IS USM	DP-FE + EXR40	+2/72		4ZC869 (CD3/CD5MII CD500/CD7/ CD5M3)		
EF16-35 / 2.8L USM	DP-FE + EXR60 DP-SWB + EXR50 DP-SWC + EXR40	+2/77 +4/77 +4/77	4ZC061	4ZC461 (C40/C50) 4ZC861 (CD3/CD5MII CD500/CD7/ CD5M3)		
EF16-35 / 2.8L USM II	DP-FE3 + EXR75C1 DP-FE4 + EXR75/4 DP-230/4 + EXR75/4 DP-SUP + EXR75/4	+2/82 +2/82	4ZC061	4ZC461 (C40/C50) 4ZC861 (CD3/CD5MII CD500/CD7/ CD5M3))		
EF16-35 / 2.8L USM II	DP-FE + FXR80 DP-230 + FXR80	+2/82 +2/82				4FC880 (CD3/CD5MII CD500/CD7 CD5M3) Only with FXR!

Canon Lens	<i>SUBAL D60 SUBAL C10/C20/C30 SUBAL CD1 SUBAL CD5</i>	D i o p t e r	Zoom Gear operated with man. Focus control <i>SUBAL D60/C10 SUBAL C20/C30 SUBAL CD1/CD5</i>	Zoom Gear operated with man. Focus control <i>SUBAL C40/C50 SUBAL CD3/CD5MII SUBAL CD500 /CD7/ CD5M3</i>	Focus Gear <i>SUBAL D60/C10 SUBAL C20/C30 SUBAL CD1/CD5</i>	Focus Gear <i>SUBAL C40/C50 SUBAL CD3 /CD5MII SUBAL/CD500/CD7/ CD5M3</i>
EF17-35 / 2.8L USM	DP-FE + EXR60 DP-SWB + EXR40 DP-SWC + EXR33	+2/77 +4/77 +4/77	4ZC051	4ZC451 (C40/C50) 4ZC851 (CD3/CD5MII CD500/CD7/ CD5M3)		
EF17-40 / 4L USM	DP-SWB + EXR40 DP-FE + EXR50 DP-230 + EXR50	+2/77	4ZC063	4ZC463 (C40/C50) 4ZC863 (CD3/CD5MII CD500/CD7/ CD5M3)		4FC810 (CD3/CD5MII CD500/CD7/ CD5M3)
EF17-40 / 4L USM	DP-SWB + EXR40 DP-FE + EXR50 DP-230 + EXR50	+2/77	4ZC063	4ZC463 (C40/C50) 4ZC863 (CD3/CD5MII CD500/CD7 / CD5M3)		4FC810 (CD3/CD5MII CD500/CD7/ CD5M3)
EF-S17-55 / 2.8 IS USM	DP-FE4 + EXR-60/4	+2/77		4ZC868 (CD3/CD5MII CD500/CD7/ CD5M3)		
EF-S17-85 /1.4-5.6 IS USM	DP-FE4 + EXR-50/4	+2/67		4ZC873 (CD3/CD5MII CD500/CD7/ CD5M3)		
EF-S18-55 / 3.5-5.6	DP-FE + EXR33 DP-SWC FP- 68	+2/58 +4/58	4ZC064 4ZC364 (in C300)	4ZC064 (C40/C50) 4ZC864 (CD3/CD5MII CD500/CD7/ CD5M3)		
EF-S18-55 / 3.5-5.6 IS	DP-FE + EXR33 DP-SWC FP- 68	+2/58 +4/58	4ZC072	4ZC072 (C40/C50) 4ZC872 (CD3/CD5MII CD500/CD7 /CD5M3)		
EF20-35 / 3.5-4.5 USM	DP-FE + EXR33 DP-SWC DP-SWB + EXR15	+2/77 +4/77 +4/77	4ZC052	4ZC852 (CD3/CD5MII CD500/CD7/ CD5M3)		
EF20-35 / 2.8L	DP-FE + EXR50 DP-SWC + EXR15 DP-SWB + EXR33	+2/72 +4/72 +4/72				
EF22-55 / 4-5.6 USM		58				
EF24-70 / 2.8L USM	DP-FE3 + EXR90C1 DP-FE4 + EXR90/4 normal chip DP-FE3+EXR-100C1 DP-FE4+EXR-100/4 full size chip	+2/77	**)	4ZC867 (CD3/CD5MII CD500/CD7/ CD5M3)		
EF24-70 / 2.8L USM	DP-FE + FXR90 DP-FE + EXR90 DP-230 + FXR90 DP-230 + EXR90	+2/77 +2/77				4FC881 (CD3/CD5MII CD500/CD7/ CD5M3) Only with FXR!
EF24-70 / 1: 2.8L II USM	DP-FE + FXR90 DP-FE + EXR90 DP-230 + FXR90 DP-230 + EXR90			4ZC867 II		
EF24-105 / 4L IS USM	DP-FE4 + EXR60/4	+2/77		4ZC871 (CD3/CD5MII CD500/CD7/ CD5M3)		
EF24-85 / 3.5-4.5 USM	DP-FE + EXR20 DP-SWC DP-SWB + EXR15	+2/67 +4/67 +4/67	4ZC053			
EF28-70 / 2.8L USM	DP-FE3 + EXR60C1 DP-FE4 + EXR60/4 DP-SWB + EXRS60	+2/77 +4/77	**)			
EF28-80 / 3.5-5.6 II	DP-FE + EXR40 DP-SWB + EXR20 DP-SWC + EXR15	+2/58 +4/58 +4/58				
EF28-80 / 3.5-5.6 IV USM	DP-FE + EXR33	+2/58	4ZC066 4ZC366 (in C300)			
EF28-90 / 4-5.6 II	DP-FE + EXR33 DP-SWB + EXR15 DP-SWC FP-75	+2/58 +4/58 +4/58				
EF28-90 / 4-5.6 II USM		58				
EF28-105 / 3.5-4.5 II USM	DP-FE + EXR33 DP-SWB + EXR20	+2/58 +4/58				

Canon Lens	<i>SUBAL D60 SUBAL C10/C20/C30 SUBAL CD1 SUBAL CD5</i>	D i o p t e r	Zoom Gear operated with man. Focus control <i>SUBAL D60/C10 SUBAL C20/C30 SUBAL CD1/CD5</i>	Zoom Gear operated with man. Focus control <i>SUBAL C40/C50 SUBAL CD3/CD5MII SUBAL CD500 /CD7/ CD5M3</i>	Focus Gear <i>SUBAL D60/C10 SUBAL C20/C30 SUBAL CD1/CD5</i>	Focus Gear <i>SUBAL C40/C50 SUBAL CD3 /CD5MII SUBAL/CD500/CD7/ CD5M3</i>
EF28-105 / 3.5-4.5		58				
EF28-105 / 3.5-4.5 USM	DP-FE + EXR33 DP-SWB + EXR20	+2/58 +4/58	4ZC057	4ZC857 (CD3/CD5MII CD500/CD7/ CD5M3)		
EF35-80 / 4-5.6 USM		52	4ZC058			
EF35-80 / 4-5.6 III		52	4ZC058			
EF50 / 2.5 macro detto with LIFESIZE CONVERTER	FP-75 FP-75 + EXR33				4FC060	
EF-S60 / 2.8 USM macro	FP-68				4FC062	4FC462 (C40/C50) 4FC862 (CD3/CD5MII CD500/CD7/ CD5M3)
EF100 / 2.8 macro	FP-145				4FC061 replaced with 4FC461 (univ.)	4FC461 (C40/C50) 4FC861 (CD3/CD5MII CD500/CD7/ CD5M3)
EF100 / 2.8 macro USM	FPS-120				not applicable	
EF100 / 2.8 macro USM	FP-FC100					Included 4FC563
EF100 / 2.8L macro IS USM	FPS-120					4FC864 (CD3/CD5MII CD500/CD7/ CD5M3)
EF100 / 2.8L macro IS USM	FP-FC100IS					Included 4FC564

**) operated with focus cogg gear directly on the lens rubber barrel

ERRORS EXCEPTED!

GEARS FOR OLDER LENSES ON REQUEST!

Updated 20.08.2014