

# INON

## INON Wireless Connection Compatibility Chart

This chart provides complimentary information when you attach Inon 「S-2000」 strobe on 「Grip Base D4」 / 「Shoe Base」 via 「Z Joint」. Please check below table to see if your camera/housing combination allows to use wireless function and which camera mirror to use. Please refer to 「S-2000」 user manual for detail of preparation to use wireless function.

Glossary: “Wireless” Indicates compatibility with S-2000 wireless function.  
 ○ → Compatible. All S-2000 functions work.  
 △ → Compatible with some operational limitation. Refer to footnotes ※ for detail.  
 × → Optical cable connection is recommended since wireless connection may not work properly.

“Camera Mirror” Indicates which Camera Mirror (【Camera Mirror 1】 , 【 Camera Mirror 2 】 or 【Mirror Sticker (camera)】 ) to use.

### Compatibility Chart

Mfr	Camera	Housing	Grip Base D4				Shoe Base			
			without Mount Base		with Mount Base ※11		without Mount Base		with Mount Base ※11	
			Wireless	Camera Mirror	Wireless	Camera Mirror	Wireless	Camera Mirror	Wireless	Camera Mirror
Canon	IXY D300	WP-DC100	○	Camera Mirror 2	○	Camera Mirror 2				
	PowerShot A10, A20	WP-DC200	○	Camera Mirror 2	○	Camera Mirror 2				
	PowerShot A10, A20, A30, A40	WP-DC200s	○	Camera Mirror 2	○	Camera Mirror 2				
	PowerShot S30, S40, S45, S50	WP-DC300	○	Camera Mirror 2	○	Camera Mirror 2				
	IXY D300a	WP-DC500	○	Camera Mirror 2	○	Camera Mirror 2				
	PowerShot A60, A70	WP-DC700	○	Camera Mirror 2	○	Camera Mirror 2				
	IXY D400, IXY D450, IXY D500	WP-DC800	○	Camera Mirror 2	○	Camera Mirror 2				
	PowerShot A80	WP-DC900	○	Camera Mirror 2	○	Camera Mirror 2				
	PowerShot S1 IS	WP-DC20	○	Camera Mirror 2	○	Camera Mirror 2				
	PowerShot A75, A85	WP-DC30	○	Camera Mirror 2	○	Camera Mirror 2				
	PowerShot S60, S70	WP-DC40	○	Camera Mirror 2 ※3	○	Camera Mirror 2 ※3				
	PowerShot A95	WP-DC50	○	Camera Mirror 2	○	Camera Mirror 2				
	IXY D600	WP-DC70	○	Camera Mirror 2	○	Camera Mirror 2				
	IXY D700	WP-DC80	○	Camera Mirror 2	○	Camera Mirror 2				
	PowerShot S80	WP-DC1	○	Camera Mirror 2	○	Camera Mirror 2				
	PowerShot A540	WP-DC2	○	Camera Mirror 2	○	Camera Mirror 2				
	IXY D80	WP-DC3	○	Camera Mirror 2	○	Camera Mirror 2				
	IXY D70	WP-DC4	○	Camera Mirror 2	○	Camera Mirror 2				
	IXY D800IS	WP-DC5	× ※4	N/A	× ※4	N/A				
	IXY D1000	WP-DC7	○	Camera Mirror 2	○	Camera Mirror 2				
	IXY D900IS	WP-DC9	○	Camera Mirror 2	○	Camera Mirror 2				
	PowerShot G7	WP-DC11	○	Camera Mirror 2						
	PowerShot A570IS	WP-DC12	○	Camera Mirror 2	○	Camera Mirror 2				
	IXY D10	WP-DC13	○	Camera Mirror 2	○	Camera Mirror 2 ※8				
	IXY D90	WP-DC14	○	Camera Mirror 2	○	Camera Mirror 2 ※8				
	IXY D810IS	WP-DC15	× ※4	N/A	× ※4	N/A				
	IXY D910IS	WP-DC17	○	Camera Mirror 2	○	Camera Mirror 2 ※8				
	PowerShot A650IS	WP-DC18	○	Camera Mirror 2						
	IXY D2000IS	WP-DC19	○	Camera Mirror 2	○	Camera Mirror 2				
	PowerShot G9	WP-DC21	○	Camera Mirror 2						
	IXY D20IS	WP-DC22	○	Camera Mirror 2	○	Camera Mirror 2				
	IXY D25IS	WP-DC23	○	Camera Mirror 2	○	Camera Mirror 2 ※8				
	IXY D95IS	WP-DC24	○	Camera Mirror 2	○	Camera Mirror 2				
	IXY D920IS	WP-DC26	○	Camera Mirror 2	○	Camera Mirror 2 ※8				
	IXY D3000IS	WP-DC27	○	Camera Mirror 2	○	Camera Mirror 2				
	PowerShot G10	WP-DC28	○	Camera Mirror 2						
	IXY D110IS	WP-DC29	○	Camera Mirror 2						
	IXY D210IS	WP-DC31	○	Camera Mirror 2						
	IXY D510IS	WP-DC32	○	Camera Mirror 2						

- ※1 S-TTL accuracy gets decrease with aperture setting F2.8 or greater.
- ※2 Remove housing diffuser (translucent white) then attach a Camera Mirror on the transparent plate.
- ※3 Remove both of housing diffuser (translucent white) and transparent panel then attach a Camera Mirror directly on housing wall.
- ※4 Wireless connection is not usable since Camera Mirror can not be attached in front of built-in flash.
- ※5 Attach a Camera Mirror directly on housing wall.
- ※6 Wireless connection is not usable since Mount Base blocks reflecting light from a camera mirror. Use Optical Cable connection.
- ※7 S-TTL flash mode is not usable. Use Manual flash mode.
- ※8 Mount Base and Camera Mirror touches each other without any operational problem.
- ※9 S-TTL flash mode is not usable since this camera does not support TTL flash mode. Use Manual flash mode.
- ※10 AD Mount Base completely covers camera's built-in flash and unable to attach Camera Mirror. Use Optical Cable connection.
- ※11 Remove the diffuser of Mount Base if any then attach a Camera Mirror on a housing.

Mfr	Camera	Housing	Grip Base D4				Shoe Base			
			without Mount Base		with Mount Base ※11		without Mount Base		with Mount Base ※11	
			Wireless	Camera Mirror	Wireless	Camera Mirror	Wireless	Camera Mirror	Wireless	Camera Mirror
Olympus	C-200Z,C-300Z	PT-009	○	Camera Mirror 2	○	Camera Mirror 2				
	C-2020Z,C-2040Z, C-3000Z, C-3030Z, C-3040Z, C-3100Z, C-4040Z, C-4100Z	PT-010	△ ※1	Camera Mirror 2 ※2						
	C-40Z	PT-012	○	Camera Mirror 2 ※2	○	Camera Mirror 2 ※2				
	X-1,X-2	PT-014	○	Camera Mirror 2 ※3	○	Camera Mirror 2 ※3				
	C-5050Z	PT-015	○	Camera Mirror 2 ※2	○	Camera Mirror 2 ※2				
	μ-10,μ-15,μ-20 μ-25,μ-30	PT-016	○	Camera Mirror 1 ※3	○	Camera Mirror 1 ※3				
	C-740UZ,C-745UZ, C-750UZ, C-755UZ	PT-018	○	Camera Mirror 2 ※2						
	C-5060WZ	PT-020	○	Camera Mirror 2 ※2	○	Camera Mirror 2 ※2				
	C-760UZ,C-770UZ	PT-022	○	Camera Mirror 2 ※2						
	C-8080WZ	PT-023	× ※4	N/A						
	X-3	PT-024	○	Camera Mirror 2 ※3	○	Camera Mirror 2 ※3				
	μ-40	PT-026	○	Camera Mirror 2 ※3	○	Camera Mirror 2 ※3				
	C-7070WZ	PT-027	○	Camera Mirror 2 ※2	○	Camera Mirror 2 ※2				
	μ600	PT-029	○	Camera Mirror 1 ※3	○	Camera Mirror 1 ※3	○	Camera Mirror 1 ※3	○	Camera Mirror 1 ※3
	SP-350	PT-030	○	Camera Mirror 2 ※2	○	Camera Mirror 2 ※2	○	Camera Mirror 1 ※2	○	Camera Mirror 1 ※2
	SP-700	PT-031	○	Camera Mirror 2 ※2	○	Camera Mirror 2 ※2				
	μ710	PT-032	○	Camera Mirror 2 ※3	○	Camera Mirror 2 ※3				
	μ720SW, μ725SW	PT-033	○	Camera Mirror 2 ※3	× ※6		○	Camera Mirror 1 ※3	○	Camera Mirror 1 ※3
	μ750	PT-034	△ ※7	Camera Mirror 1 ※5	△ ※7	Camera Mirror 1 ※5	△ ※7	Camera Mirror 1 ※5	△ ※7	Camera Mirror 1 ※5
	μ770SW, μ795SW	PT-035	○	Camera Mirror 2 ※3	× ※6		○	Camera Mirror 1 ※3	○	Camera Mirror 1 ※3
μ760	PT-036	○	Camera Mirror 2 ※2	○	Camera Mirror 2 ※2	○	Camera Mirror 1 ※2	○	Camera Mirror 1 ※2	
SP-550UZ, 560UZ	PT-037	○	Camera Mirror 2 ※5			○	Camera Mirror 1 ※5			
μ780, μ830	PT-039	△ ※7	Camera Mirror 1 ※5	△ ※7	Camera Mirror 1 ※5	△ ※7	Camera Mirror 1 ※5	△ ※7	Camera Mirror 1 ※5	
μ790SW, μ850SW	PT-041	○	Camera Mirror 2 ※2	× ※6		○	Camera Mirror 1 ※3	○	Camera Mirror 1 ※3	
μ1020	PT-042	○	Camera Mirror 2 ※5	○	Camera Mirror 1 ※5	○	Camera Mirror 1 ※5	○	Camera Mirror 1 ※5	
μ1030SW	PT-043	○	Camera Mirror 2 ※3	× ※6		○	Camera Mirror 1 ※3	○	Camera Mirror 1 ※3	
FE-360	PT-044	○	Camera Mirror 1 ※3	○	Camera Mirror 1 ※3					
μ TOUGH-8000	PT-045	○	Camera Mirror 2 ※2			○	Camera Mirror 1 ※3			
FE-3010	PT-046	○	Camera Mirror 2 ※3							
μ TOUGH-6000	PT-047	○	Camera Mirror 2 ※2			○	Camera Mirror 1 ※3			
Panasonic	DMC-FX01, FX07	DMW-MCFX01	○	Camera Mirror 1	○	Camera Mirror 1 ※5				
	DMC-FX01, FX07, FS1, FS2	DMW-MCFX07	○	Camera Mirror 1	○	Camera Mirror 1 ※5				
	DMC-FX30, FX33	DMW-MCFX30	○	Mirror Sticker (camera)	○	Mirror Sticker (camera)				
	DMC-FX35, FX37	DMW-MCFX35	○	Mirror Sticker (camera)	○	Mirror Sticker (camera)	○	Mirror Sticker (camera)	○	Mirror Sticker (camera)
	DMC-FX40	DMW-MCFX40	○	Mirror Sticker (camera)	○	Mirror Sticker (camera)	○	Mirror Sticker (camera)	○	Mirror Sticker (camera)
	DMC-FS3, FS5	DMW-MCFX5	○	Mirror Sticker (camera)	○	Mirror Sticker (camera)	○	Mirror Sticker (camera)	○	Mirror Sticker (camera)
	DMC-TZ3	DMW-MCTZ3	○	Mirror Sticker (camera)						
	DMC-TZ5	DMW-MCTZ5	○	Mirror Sticker (camera)			○	Mirror Sticker (camera)		
	DMC-TZ7	DMW-MCTZ7								
DMC-FT1	DMW-MCFT1	○	Mirror Sticker (camera)							
Fujifilm	Finepix F710,F810	WP-FX701	△ ※9	Camera Mirror 1 ※3	△ ※9	Camera Mirror 1 ※3				
	Finepix F10,F11	WP-FXF10	○	Camera Mirror 2 ※3	○	Camera Mirror 2 ※3				
	Finepix F30,F31fd	WP-FXF30	○	Camera Mirror 2 ※3	○	Camera Mirror 2 ※3				
	Finepix F40fd	WP-FXF40	○	Camera Mirror 2 ※3	○	Camera Mirror 2 ※3				
	Finepix F50fd	WP-FXF50	○	Camera Mirror 1 ※3	○	Camera Mirror 1 ※3				
	Finepix F100fd	WP-FXF100	○	Camera Mirror 1 ※3			○	Camera Mirror 1 ※3		
	Finepix F200EXR	WP-FXF200	△ ※7	Camera Mirror 1 ※3			△ ※7	Camera Mirror 1 ※3		
Finepix Z100fd, Z200fd, Z250fd	WP-FXZ100	○	Camera Mirror 1							
Sony	DSC-P100, P150	MPK-PHB	○	Camera Mirror 2	○	Camera Mirror 2				
	DSC-W1, W5, W7	MPK-WA	○	Camera Mirror 2	○	Camera Mirror 2				
	DSC-N1, N2	MPK-NA	○	Camera Mirror 2	○	Camera Mirror 2				
	DSC-W170, W300	MPK-WD	○	Camera Mirror 2	○	Camera Mirror 2				
	DSC-T700, T77	MPK-THG	○	Camera Mirror 2	× ※10	N/A				
Nikon	E2200, E3200, E4100	WP-CP1	○	Camera Mirror 1 ※3	○	Camera Mirror 1 ※3				
	E4200, E5200	WP-CP2	○	Camera Mirror 1 ※3	○	Camera Mirror 1 ※3				
	E7900, E5900	WP-CP4	○	Camera Mirror 1 ※3	○	Camera Mirror 1 ※3				

※INON INC. confirms product compatibility based on camera/housing available in Japan.

INON Inc.

2-18-9, Dai, Kamakura,  
Kanagawa 247-0061 JAPAN  
E-mail [support@inon.co.jp](mailto:support@inon.co.jp)  
Fax. +81(0)467-48-2178  
URL <http://www.inon.co.jp/>

March 2009